






Trademark
SOUNDPROOFING

INSTALLATION INSTRUCTIONS

1. Thread the coupling nut all the way onto the hanger nut.

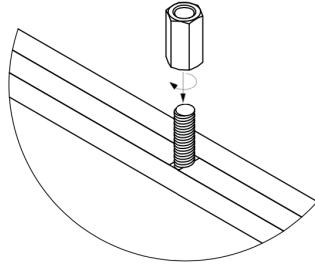

- 2a. Threaded rod – unscrew the coupling nut halfway and screw in the threaded rod.

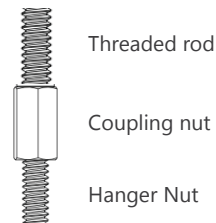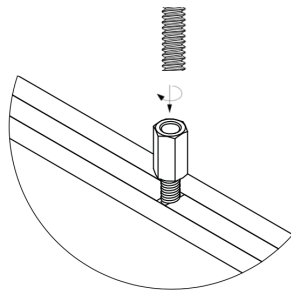

- 2b. Cable – unscrew coupling nut halfway; screw on the jointed gripper.

