



Trademark
SOUNDPROOFING

INSTALLATION INSTRUCTIONS


These installation suggestions consist of a common process for tile installation. Installers should rely upon their own professional experience and understanding of their unique requirements to ensure a successful install.

Confirm your Unistrut installation has been completed. Consult with a professional about a proper Unistrut installation for your ceiling type (concrete vs. sheet-rock).

Tools Needed




Drill

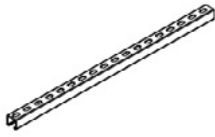

Unistrut
Installed



Cable Cutter



Nylon Cone Nut



1/4-20 Nut




1/4-20 Bolt




Fender
Washer

Items Included

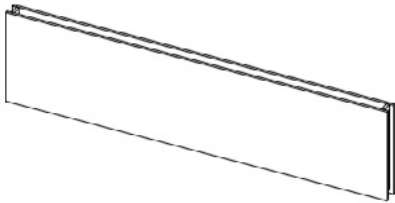

Baffle



(2) Griplock



Hanger Bolt Driver
(IVY classic)



(2) Hanger Bolt




(2) Coupler Nut



(2) Aircraft Cable or (2) Threaded Rod

1. Unwrap Baffle from plastic Wrap. Confirm baffle dimensions match your needs.

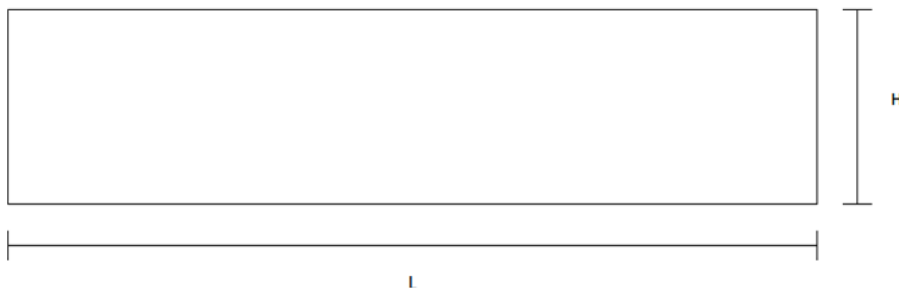

845-388-1200

sales@TMSoundproofing.com

www.TMSoundproofing.com




Trademark
SOUNDPROOFING


INSTALLATION INSTRUCTIONS

If your baffle is pre-drilled with hanger bolts inserted, go to step 4.

2. If your baffles came without pre-drilled hanger bolts, follow this step: Measure the distance between the two Unistruts that will be holding the baffle. Match your hole location distance to the distance of the Unistruts. Use a drill machine to make a 1/8" pilot hole for hanger bolts.

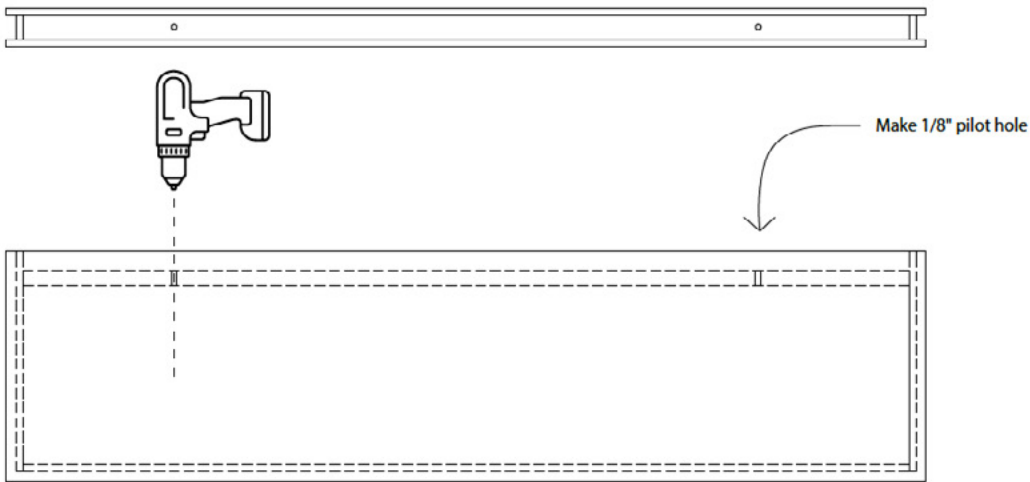

3. Use 1/4" - 20 hanger bolt driver tool to drive bolt into place, leaving 3/2" of the 1/4" - 20 threads exposed.


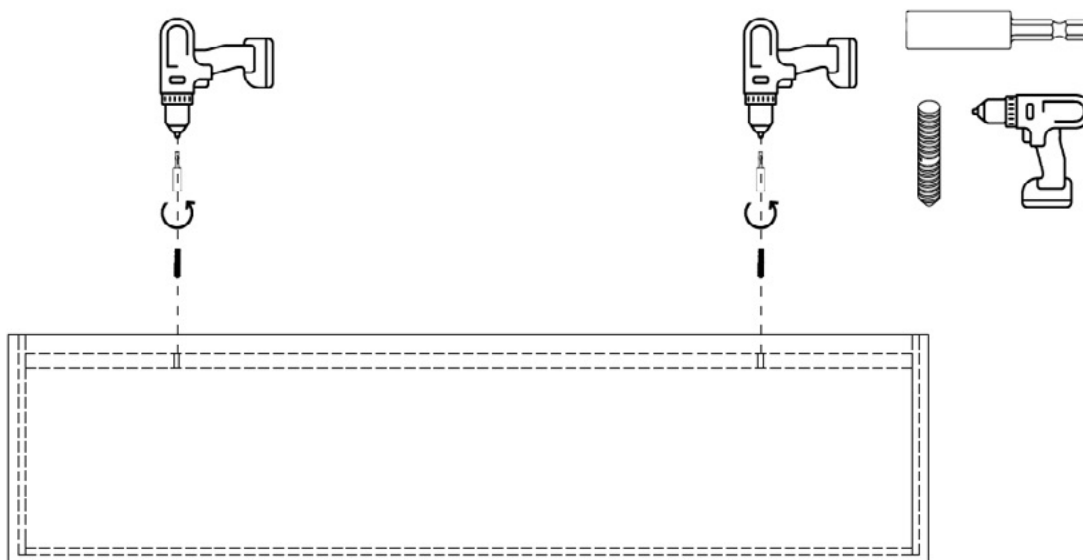






Trademark
SOUNDPROOFING

INSTALLATION INSTRUCTIONS



4. Screw the coupling nut all the way on to the hanger bolt.

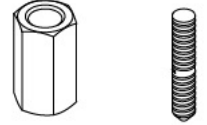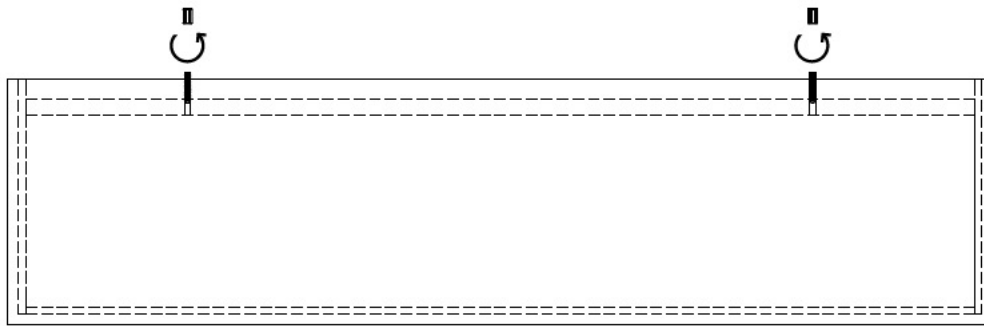

5. Install Threaded Rod or Aircraft Cable from Unistrut

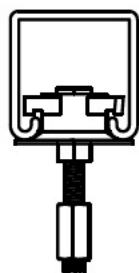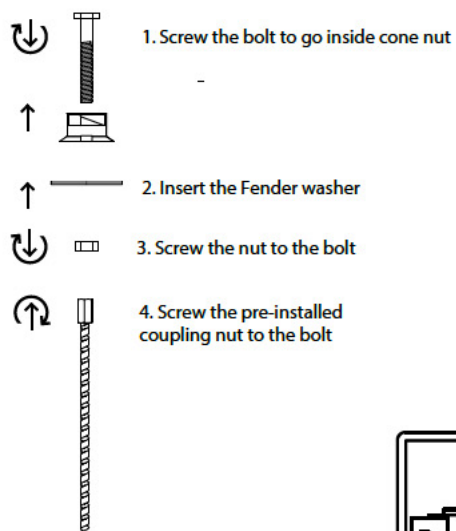

Threaded Rod

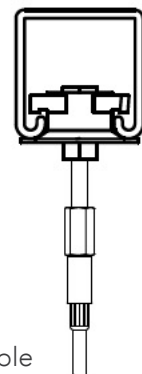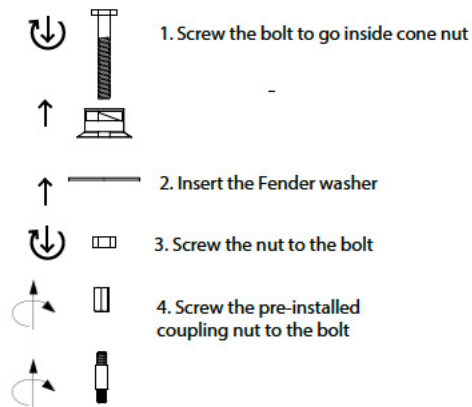


Aircraft Cable




Trademark
SOUNDPROOFING

INSTALLATION INSTRUCTIONS

6a. Threaded Rod Specific Step ONLY Cut 1/4" threaded rod at desired length and screw in half way into the coupler nut.

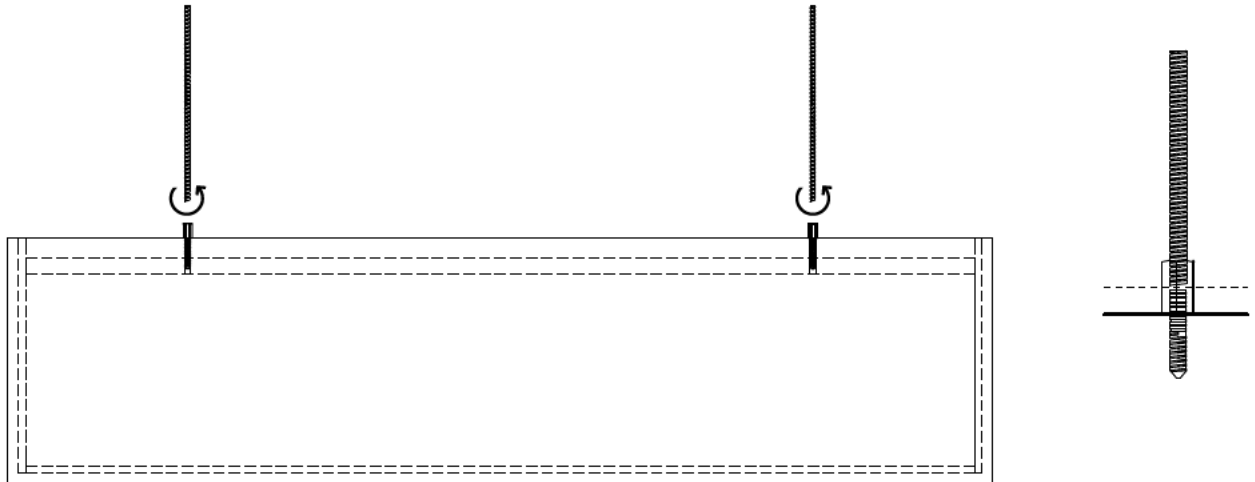

6b. Aircraft Cable Specific Step ONLY. Cut the excess cable using cable cutter.

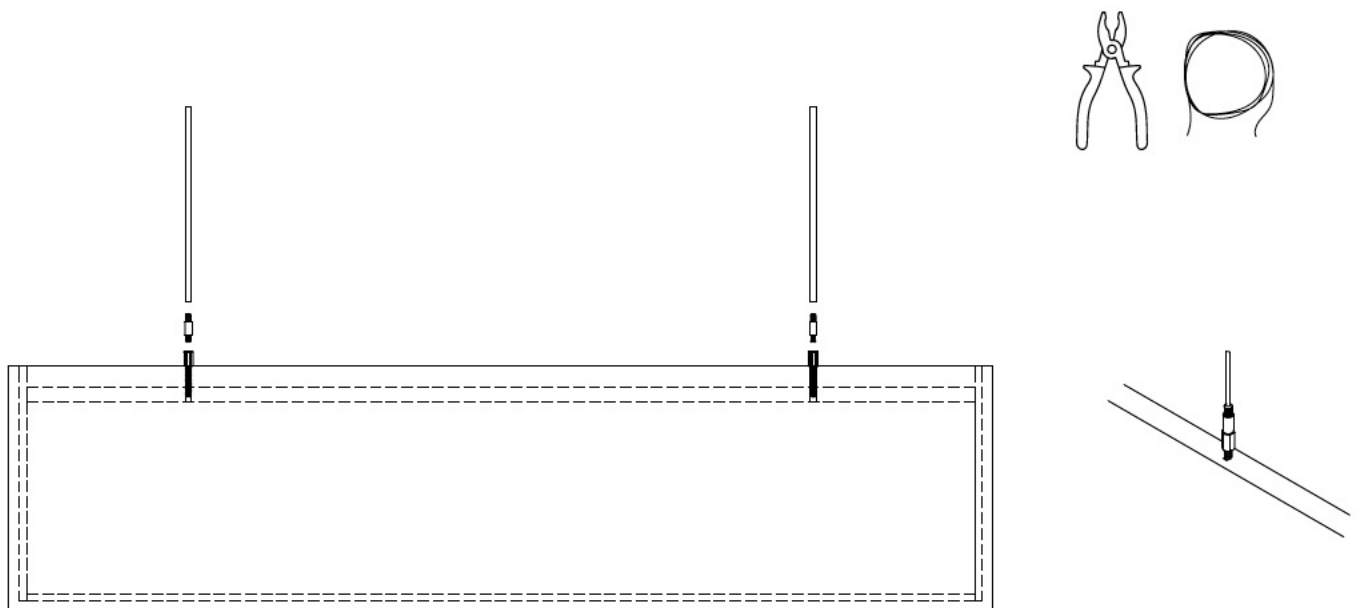





Trademark
SOUNDPROOFING

INSTALLATION INSTRUCTIONS

7. Final view

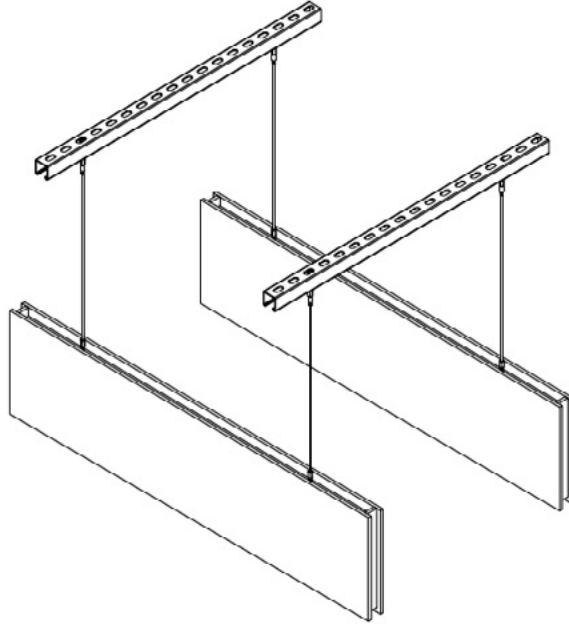

Threaded Rod

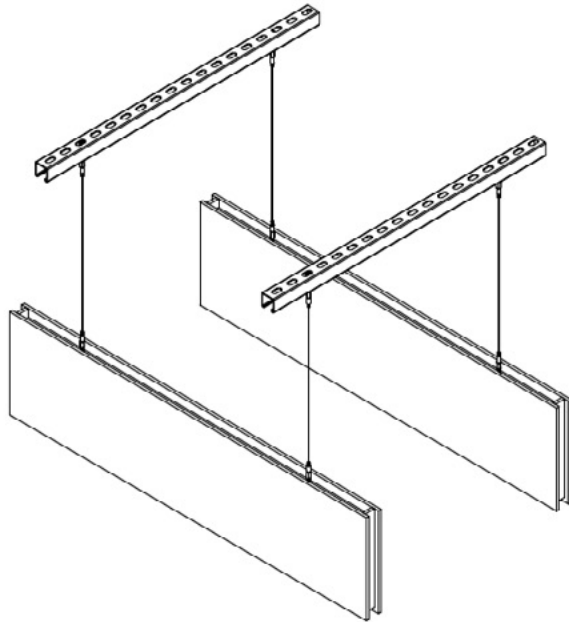

Aircraft Cable

