


200 STC - Acoustical Door Louver

Installation Instructions

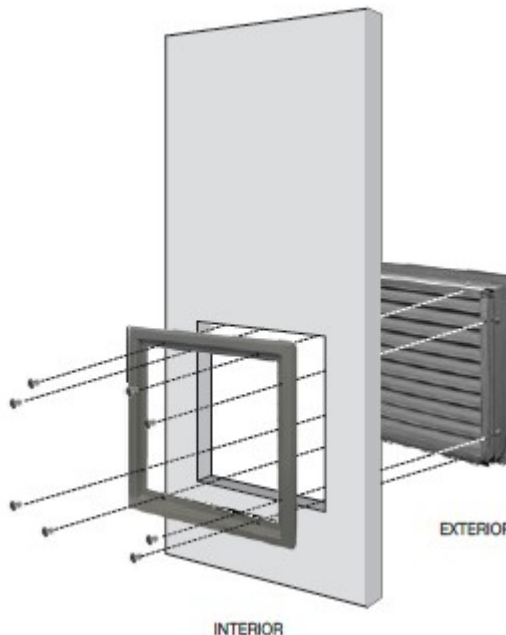

Step 1:

Cut the hole in the door to correspond to the rough opening size of the louvers frame ($\frac{1}{2}$ " higher and wider than the order size). Prepare the cutout if required, per the door manufacturers installation instructions.

Step 2:

Insert frames in the cutout, the corridor side/exterior first, then the room side/interior.

Step 3:

Secure with screws provided. Screw in enough to hold frame for alignment then tighten the screws alternately to avoid putting more pressure on one side than the other.

