



**Trademark**  
SOUNDPROOFING

## SonoFlat Panels Installation Guide

### Recommended Additional Installation Materials

- |  |   |
|--|---|
| • Caulk-gun ( <i>for Tubetak Pro</i> ) | • Tape measure  |
| • Carpenters Level                     | • Small ladder ( <i>depending on ceiling height</i> ) |
| • Pencil                               |   |


### Optional Additional Installation Materials

- |                           |   |
|---------------------------|---|
| • Foamtak Spray Adhesive* | • T-Pins  |
|---------------------------|---|


\* This system includes **Tubetak Pro Adhesive**, which is safe to use on all included products. You may wish to use Auralex's **Foamtak** Spray Adhesive for quicker drying times. **Foamtak** is available through all Auralex authorized dealers.

## SonoFlat Panel Installation Guide

- 1** Mark intended location of each **SonoFlat Panel** on the wall or ceiling.

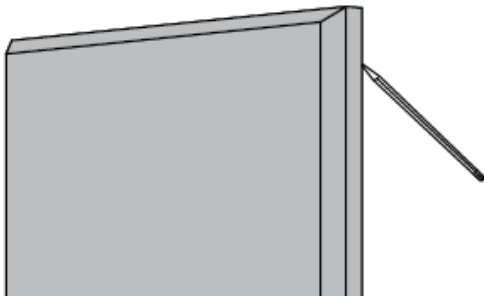

- 2** Apply **Tubetak Pro** to the back of the **SonoFlat Panel**, as pictured.

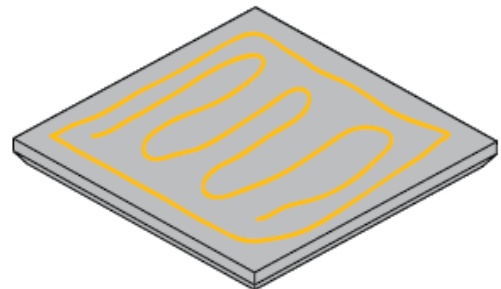

- 3** Carefully press **SonoFlat Panel** to the marked location of the wall or ceiling. Maintain continuous pressure. Depending on environmental and surface conditions, it will take anywhere from 2-4 minutes to hold.



#### TIP

You can use T-Pins to temporarily hold the panel in place while the adhesive sets.