


Door Panel Sound Barrier Sample Door Template

*Door Knob on left or right side

*Velcro attached temporarily (mating Velcro with PSA also supplied) while mechanical fasteners are installed.

*Recommended panel be sized to cover hinges and frame, if installed on hinge side.

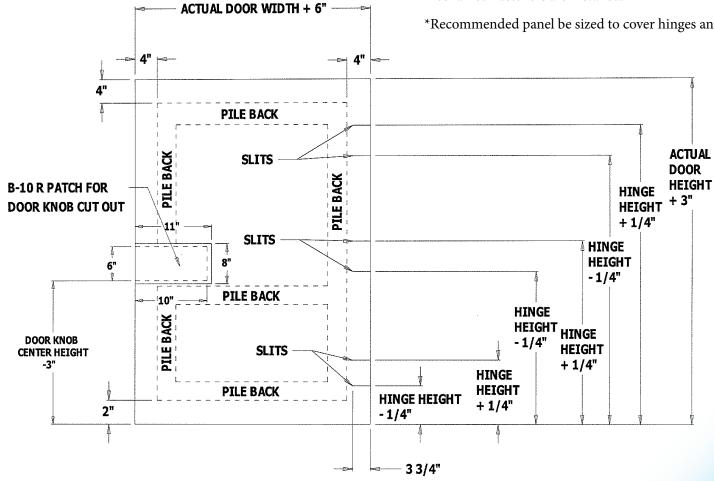

148 Horton Drive, Suite B Monsey, New York, 10952 Phone: 845.352.3200 Fax: 845.367.4657

www.TMSoundproofing.com