





Trademark
SOUNDPROOFING

TMS Fabric Acoustic Panels

Installation Guide

CONTENTS:

- (1) Fabric Covered Acoustic Panel
- (2) Anchors and Screws
- (2) Installation Brackets

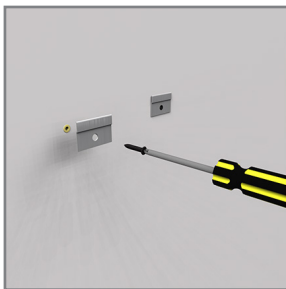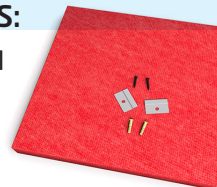



STEP 1

Screw the 2 clips into the wall with anchors and screws provided.



STEP 2

Paste liquid nail to one end of the panel.

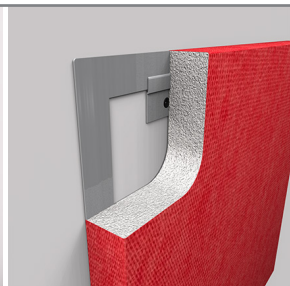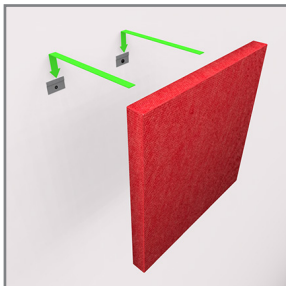

STEP 3

To affix the panel to the wall, insert the other end of the panel into the clips .

Repeat these steps for additional remaining panels.