


## Installation Guide *SKU: DSZ53*

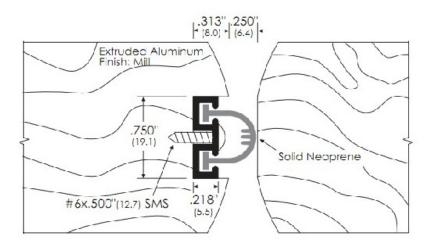

- 1. Mortise door as per dimensions shown above. When closed, gap between doors should be approximately .25".
- 2. Measure and cut the whole astragal to length required.
- 3. Remove the neoprene insert.
- 4. Install the track into the door mortised, fasten with screws provided.

Phone: 845.352.3200 Fax: 845.367.4657

5. Re-insert the neoprene to desired side.

www.TMSoundproofing.com