




Trademark
SOUNDPROOFING

Installation Guide

SKU: DSZ56

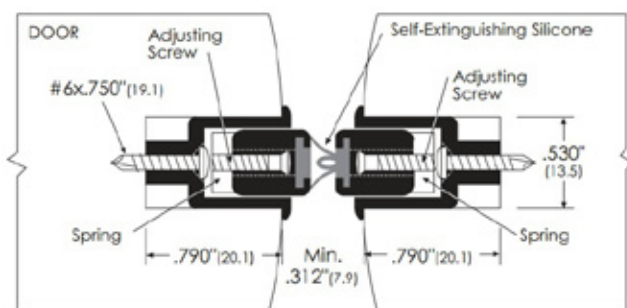

- 1 Mortise doors, dimension as shown above. The gap between the doors when they closed should be minimum .250"
- 2 Measure and cut the whole piece to size needed. DO NOT DISASSEMBLE.
- 3 Remove the neoprene insert only.
- 4 Install the astragal into the door mortise, fasten with self drilling screws provided.
- 5 Fasten the adjusting screws and make proper adjustment.
- 6 Insert back the neoprene rubber.

